


BE1380-A
Alarm Clock Receiver




EN Remove the battery tab

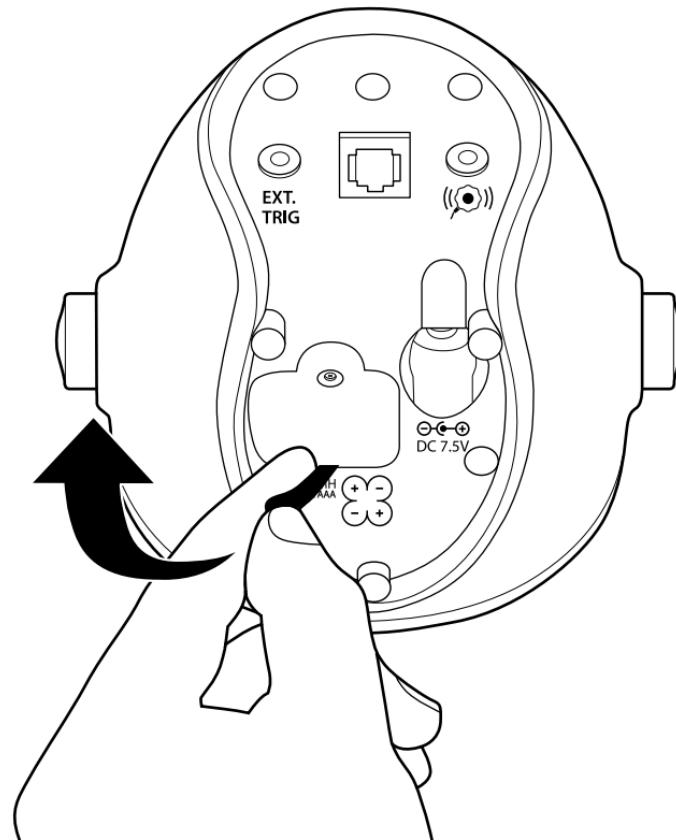




EN Connect the alarm clock

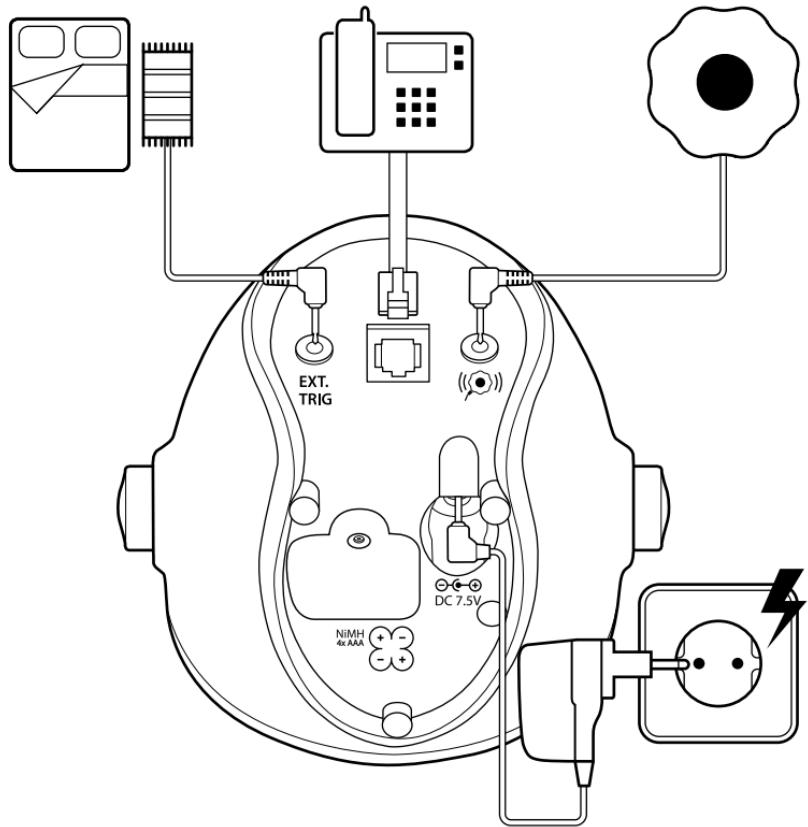




EN Set the time

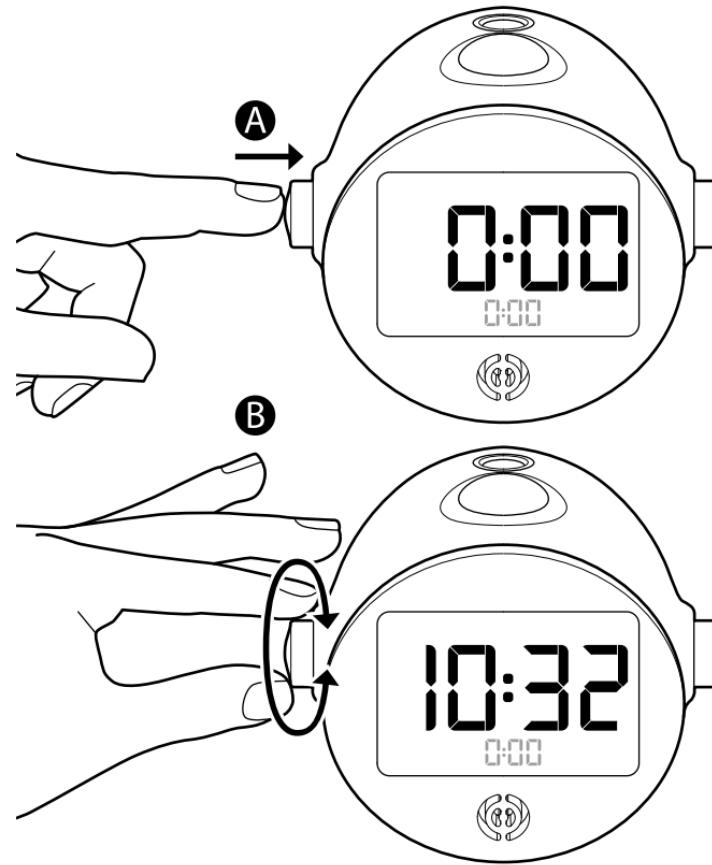




EN Set the alarm

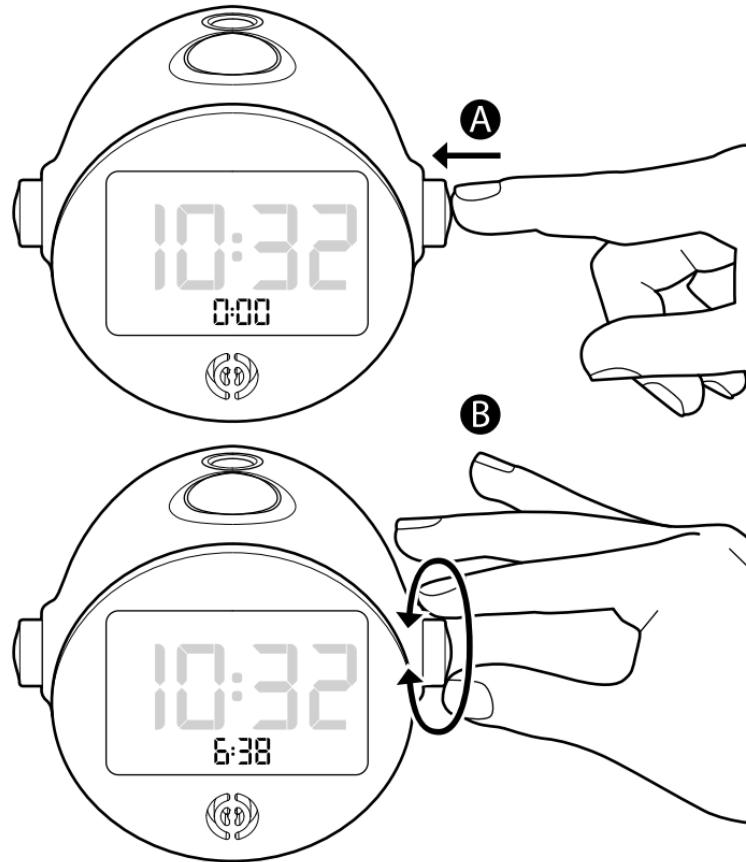




EN Activate the alarm

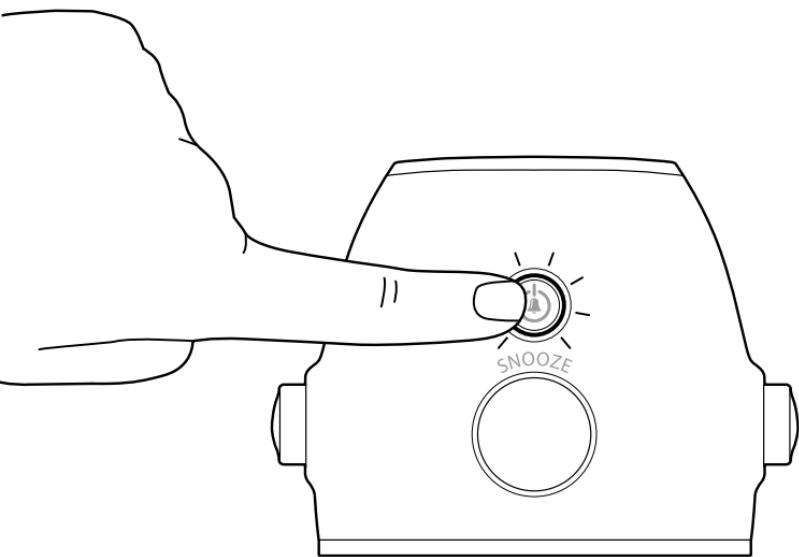


SNOOZE

EN Snooze

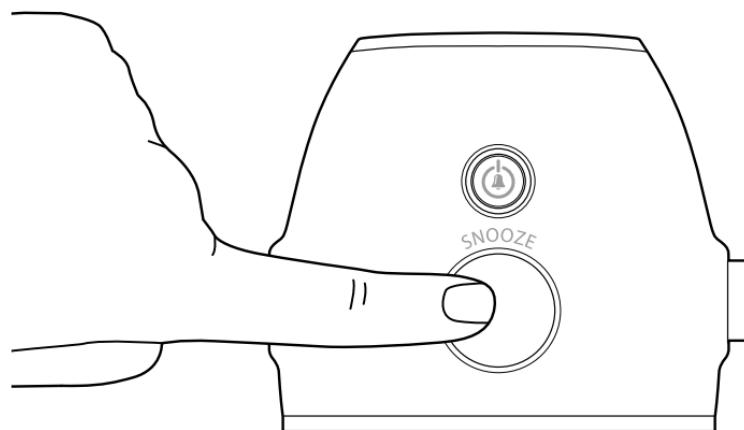



EN Night light

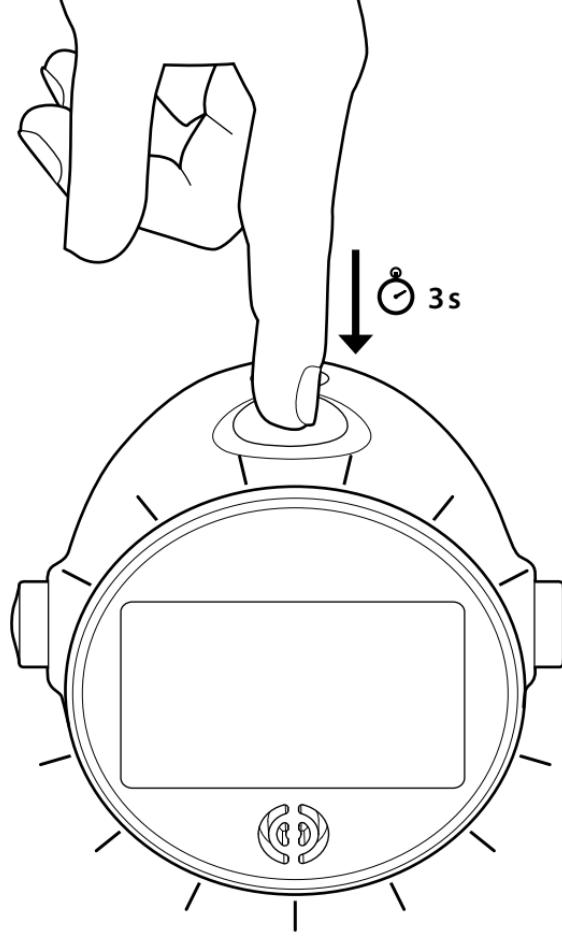

EN Time




EN Snooze

EN Alarm

EN Brightness

EN Flash/Sound

EN Time format

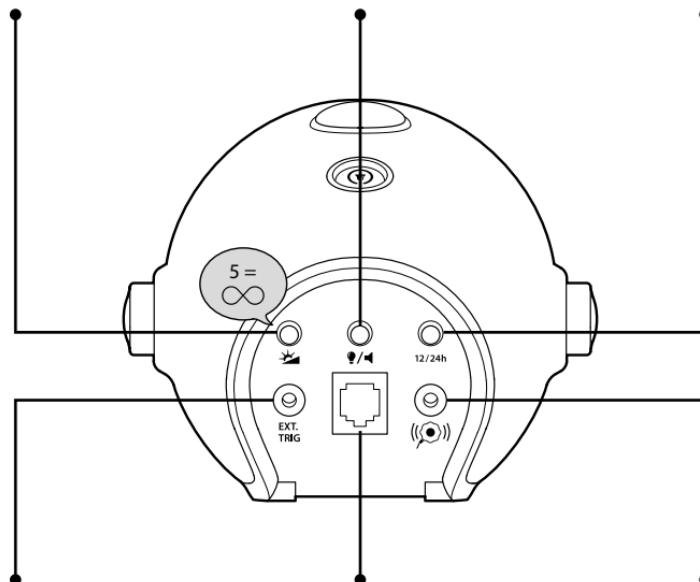

EN Flash

EN Speaker





EN Night light

EN Ext. trig.

EN Telephone

EN Bed shaker

EN Pairing with a Visit transmitter

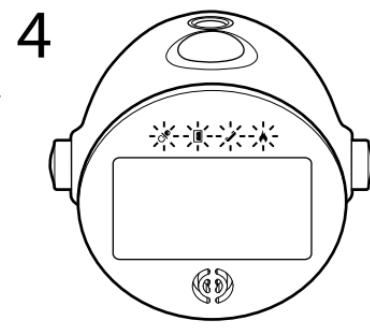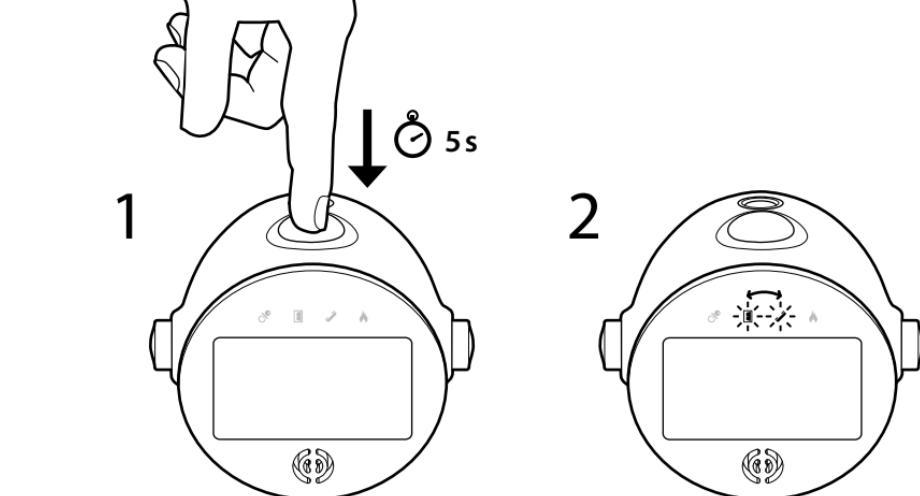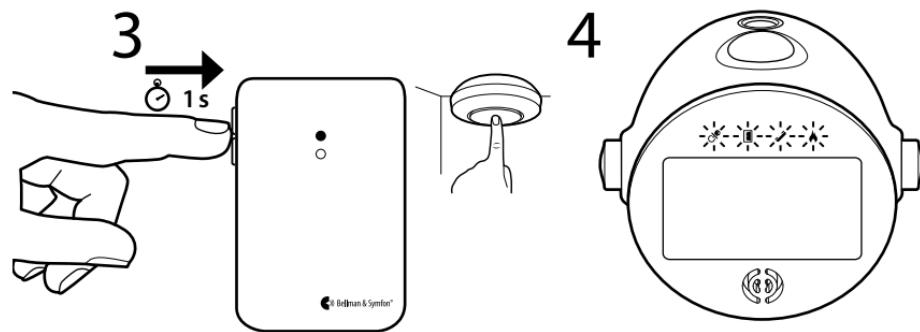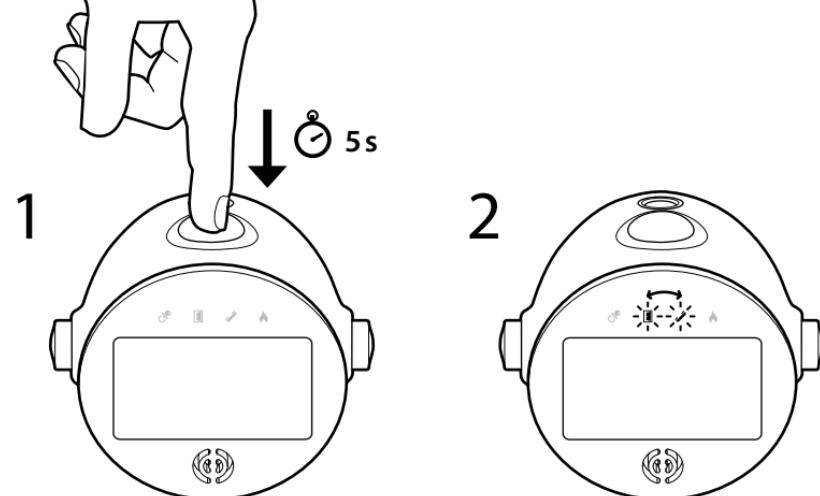

Read this first

This booklet guides you on how to use and maintain your new Visit Alarm Clock. Ensure you read this booklet carefully, including the **Warnings** section. If you have additional questions, contact your hearing care professional.

For BE1380 Visit Alarm Clock

Intended user	The intended user is a person with a wish to receive augmented signals.
Intended user group	The intended user group consists of people of all ages.
Principle of operation	The Visit system consists of a set of wirelessly connected transmitters and receivers that are located across the home. When a transmitter detects an activity, it signals the Visit receiver that alerts the user with sound, flashes or vibrations. In order to use the system, you need at least one transmitter and one receiver.

Power and batteries

⚠ WARNING

Risk of explosion if batteries are replaced with the wrong type. dispose of used batteries in accordance with local and state regulations.

Batteries are toxic. They must not be swallowed! Keep out of reach of children and pets. If the batteries are swallowed, seek medical attention immediately!

- Rechargeable batteries should be fully charged before you use the device for the first time.
- The batteries are maintained charged as needed; when this happens, the segments in the battery icon will blink. Once they are fully charged, the battery icon disappears.

When the battery level has dropped to the point where all three segments are off, the battery frame will blink to indicate that the batteries are almost drained. Insert the power adapter to prevent the clock from turning off.



When the "crossed-out battery" icon lights up, it may be due to the following battery issues:

- Batteries are missing
- Batteries are installed incorrectly
- Batteries are no longer accepting a charge
- Battery leakage is preventing contact
- Batteries are defective
- The wrong type of batteries has been installed

General warnings

This section contains important information about safety, handling and operating conditions. Keep this booklet for future use. If you are just installing the device, this booklet must be given to the householder.

⚠ Hazard warnings

- Failure to follow these safety instructions could result in fire, electric shock, or other injury or damage to the device or other property.
- Keep this device out of reach of children under 3 years.
- Flashes can trigger epileptic seizures.
- Be aware that alarms and notifications can be missed if batteries run out.
- Do not use or store this device near any heat sources such as naked flames, radiators, ovens or other devices that produce heat.
- Use only power adapters and battery types that are specified in this leaflet.
- Protect cables from any potential source of damage.
- Do not dismantle the device; there is a risk of electric shock. Tampering with or dismantling the device will void warranty.
- This device is designed for indoor use only. Do not expose the device to moisture.
- Protect the device from shocks during storage and transport.
- Do not make any changes or modifications to this device. Use only original Bellman & Symfon accessories to avoid any electrical shock.
- Batteries are toxic. Do not swallow them! Keep out of reach of children and pets. If they are swallowed, consult your physician immediately!

ⓘ Information on product safety

- Failure to follow these instructions could result in damage to the device and void the warranty.
- Do not expose batteries to fire or to direct sunlight.
- Rechargeable batteries should be charged fully before using the device for the first time. Only charge batteries in a temperature between 0°–35°C, 32°–95°F.

- Rechargeable batteries should only be changed by Bellman & Symfon or an authorized service center. There is a risk of explosion if the batteries are not replaced correctly.
- Do not drop your device. Dropping onto a hard surface can damage it.
- Do not use the device in areas where electronic equipment is prohibited.
- The device may only be repaired by an authorized service center.
- If you encounter problems with your device, contact the point of purchase, your local Bellman & Symfon office or the manufacturer. Visit bellman.com for contact info.
- This device should not be used on aircrafts unless specifically permitted by flight personnel.
- No company, enterprise or user is allowed to change the frequency, enhance the transmitting power or alter the original characteristics or performance on an approved low power radio frequency device.

Operating conditions

Operate the device in a dry environment within the temperature and humidity limits stated in this leaflet. If the device gets wet or is exposed to moisture, it should no longer be regarded as reliable and should therefore be replaced.

Cleaning

Disconnect all cables before you clean your device. Use a soft, lint-free cloth. Avoid getting moisture in openings. Do not use household cleaners, aerosol sprays, solvents, alcohol, ammonia or abrasives. This device does not require sterilization.

Service and support

If the device appears to be damaged or doesn't function properly, follow the instructions in this booklet. If the product still doesn't function as intended, contact your local hearing care professional for information on service and warranty.

Warranty conditions

Bellman & Symfon guarantees this product (excluding the battery) for two (2) years from date of purchase against any defects that are due to faulty materials or workmanship. This guarantee only applies to normal conditions of use and service, and does not include damage resulting from accident, neglect, misuse, unauthorized dismantling, or contamination howsoever caused.

This guarantee excludes incidental and consequential damage. Furthermore, the warranty does not cover Acts of God, such as fire, flood, hurricanes and tornadoes. This warranty gives you specific legal rights and you may also have other rights that vary with territory. Some countries or jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitation may not apply to you. This guarantee is in addition to your statutory rights as a consumer. The above warranty may not be altered except in writing signed by both parties hereto.

Symbol explanation



Indicates the manufacturer's serial number so that a specific device can be identified.



Indicates the device manufacturer.



This symbol indicates the need for the user to consult the instructions for use.



This symbol indicates that caution is necessary when operating the device or control close to where the symbol is placed, or that the current situation needs operator awareness or operator action in order to avoid undesirable consequences.



To identify a place where information may be found, especially in an emergency.



Indicates the temperature limits to which the device can be safely exposed.



Indicates the range of humidity to which the device can be safely exposed.

Technical specifications

Dimensions

121 × 108 × 92 mm, 4.8 × 4.3 × 3.6"

Weight

Visit/Pro model: 350 g, 12.4 oz. (Including batteries)

Mains power

7.5 V DC / 1.5 A

Battery

Battery backup: 4 × 1.2 V AAA NiMH rechargeable batteries

Operating time:

~ 24 h when fully charged

Charging time:

~ 10 h from fully depleted

Connections

3.5 mm stereo ext. trigger input

RJ-11 telephone modular jack, 26 – 120 V RMS, 15 – 100 Hz

Sound

Raises slowly to 100 dBA @ 10 cm, 4" / 94 dBA @ 30 cm, 12"

Flash

Multiple frequency signal, 950 Hz – 3000 Hz

Four high-intensity pulsating LEDs

Warning!

Flashes can cause epileptic seizures

Bed shaker

Vibrator power: 2.0 – 4.0 VDC

Radio frequency

315 MHz

Operation

Temperature: 0° to 35° C, 32° to 95° F

Coverage

Humidity: 15% - 90%, non-condensing
50 – 250 m depending on the characteristics of the building. Coverage is reduced if walls and large objects block the signal.

Display

LCD display with adjustable backlight intensity in 5 steps

Night light

Type: Electro Luminescent light

Alarm and snooze

Timeout: 1 h on mains power, 15 min. on battery

Configuration

Alarm timeout: 20 min. Decreasing interval from 9 to 2 min.

In the box

- BE1380 Visit Alarm Clock
- BE1270 Bed Shaker
- 4 × 1.2 V AAA NiMH batteries
- 7.5 V DC / 1.5 A power adapter

Accessories

- BE1270 Bed Shaker
- BE9105 Telephone cable
- BE9026 Contact mat

Product disposal and recycling information

According to local laws and regulations, your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. The recycling of your product will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Battery disposal information

The product contains batteries that according to local laws and regulations must be disposed of separately from household waste. Take used batteries to a collection point designated by the authorities.



Manufacturer

Bellman & Symfon Group AB
Södra Längebergsgatan 30
436 32 Askim, Sweden
Phone: +46 31 68 28 20
E-mail: info@bellman.com
bellman.com

Revision: BE1380_067MAN2.0
Date of issue: 2024-11-14
TM and © 2026 Bellman & Symfon
AB. All rights reserved.

