

Bellman Watch

BE3330



Your home on your wrist.

The Bellman Watch combines discreet vibrations with clear Visit notifications – all in a sleek and light-weight design. It lasts up to one week on a single charge and has an impressive range of up to 200 meters, open field. So, whether you are down in the basement or enjoying a cozy dinner out in the garden, you will be within reach.

Bellman Watch is made of materials that withstands wear and tear, are kind to the skin and very comfortable to wear.

It is packed with useful features like a Do not disturb and a Call for attention-function. Hold down the back key and the Visit receivers around your home will sound, flash or vibrate to notify your dear ones.



Features

Discreet vibrations
Silent and non-intrusive

Clear signal identification
Dynamic symbols and vibration patterns

Comfortable to wear
Materials that are kind to the skin

Easy to customize
Exchangeable wrist bands and watch faces

Operating time
Up to one week on a single charge




Technical specifications




Dimensions and weight

Height	50 mm lug-to-lug
Width	45 mm
Depth	10 mm
Weight	43 g (Watch), 14 g (Pocket charger)
Watch material	ABS + PC
Band material	Silicone

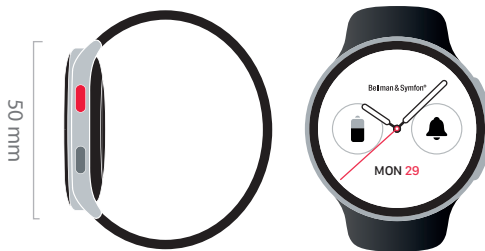

Pocket charger

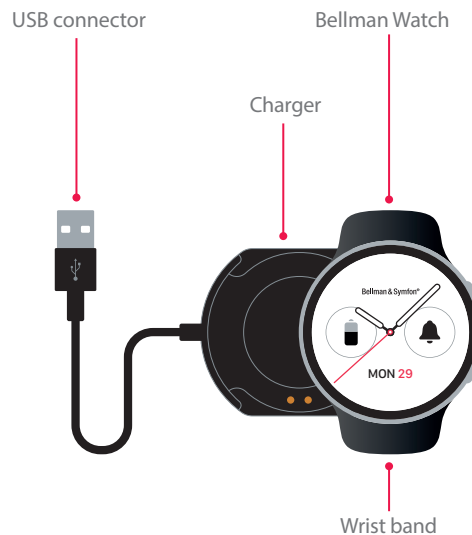

The keys



Features

- **Compatible with Visit™ Legacy**
Works with 433MHz units, using a Bridge
- **Clear signal identification**
Dynamic signals and vibration patterns
- **Multiple clock faces**
Both analogue and digital variants
- **Out of range alert**
Alerts you if connection is lost
- **Do Not Disturb**
When functional minimalism is key
- **Bright / Dark mode**
A display theme for your preference
- **Call for attention**
Designated button to call for your family's attention
- **Splash proof (IP67)**

Compliance

- Regulatory Compliance Mark, RCM

Power and battery

- Lithium polymer Battery power
3.7 V; 200 mAh, rechargeable battery
- Power consumption
Active: 60 mA, Idle position: 130 µA
- Operating and charging time
Up to one week, Charging time: 2 h

Communication and coverage

- Bluetooth frequency: 2400 – 2483.5 MHz
- Bluetooth 5.0, category I (+8dBm)
- Range: Up to 200 m open field

Environmental requirements

- Operating temperature: 0° to 35° C, (32° to 95° F)
- Relative humidity: 15% to 90%
(non condensing)

In the box

- BE3330 Bellman Watch
- BE9292 Pocket Charger
- BE9419 Wrist band, black



© 2024 and ™ Bellman & Symfon AB

Bellman and Bellman & Symfon are registered trademarks owned by Bellman & Symfon AB, all rights reserved. This leaflet is subject to change without prior notice.

BE3330_DAS001-AU

bellman.com